

WIFI IP KIT Quick Start Guide

- 1) Connect NVR to the power and then boot up;
- 2) Connect network camera to the power and then boot up;
- 3) Connect NVR to the monitor and follow the prompts to set. Wait for one minute; you can see the video from the network camera on the preview interface.

After you connected the network camera to the NVR, you do not need to set camera again if you changed NVR network setup such as SSID, password, verification mode or encryption mode. The network camera can auto connect to the NVR again. Dahua WIFI KIT supports plug and play function.

Note:

1. When you are connecting the network camera to the NVR, the distance between these two devices shall be as close as possible (Recommended distance is within 5M). Too long distance may result in connection failure;
2. After the successful connection, if you want to connect current camera to another NVR, please reset the camera first.